User Manual

# ChatCam Pro 2.0 MP Webcam (4310400)

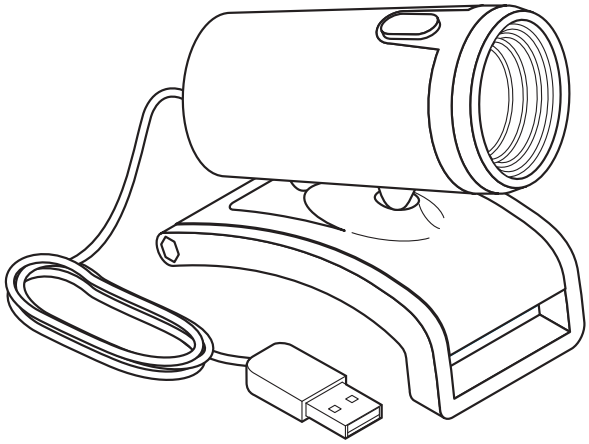

**System Requirements:**

- A Computer with an available USB Port
- Windows® XP, Windows® Vista™ or Windows® 7

**Packaging Contents:**

- ChatCam Pro 2.0 MP Webcam
- AMCap Software Disc
- Quick Start Guide
- Limited Lifetime Warranty

## Contents


Installing your New Webcam ..... 2

Installing the Software ..... 3

Capturing a Video ..... 4

Capturing a Photograph ..... 5

Setting the Webcam Options ..... 6

Webcam Features ..... 9

Maintaining your Webcam ..... 9

# Installing your New Webcam

**1**

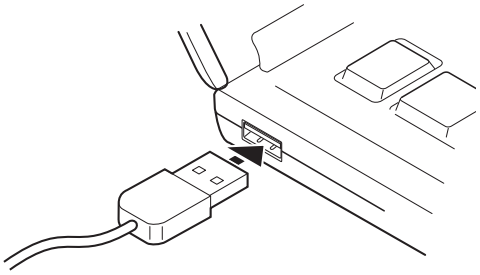

Plug the USB cord into an available USB port on the computer. USB ports are identified as ⟷.

**2**

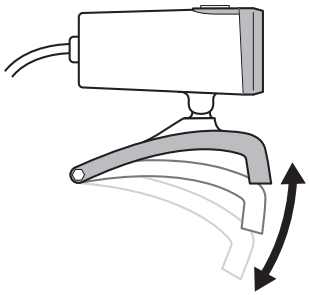

The base of the webcam contains a clip to secure it to a location if necessary.

**3**

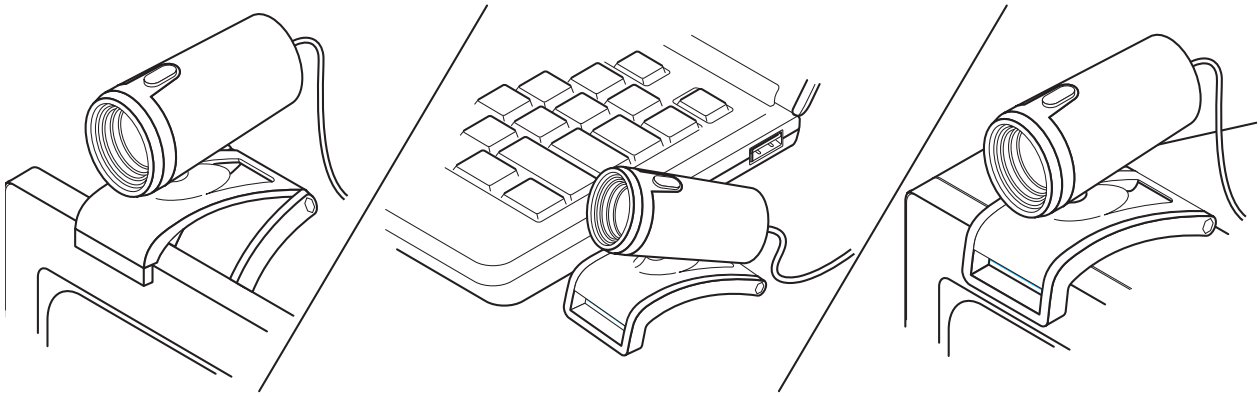

Setup the webcam in a position that is suitable to your surroundings.

**4**

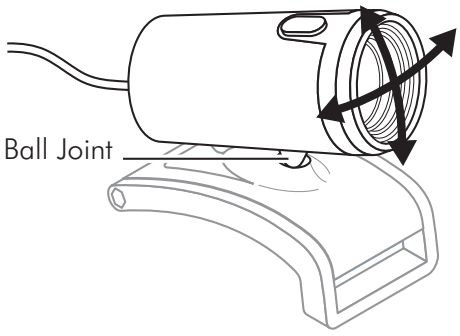


Rotate the ball joint to adjust the angle of view.

**5**

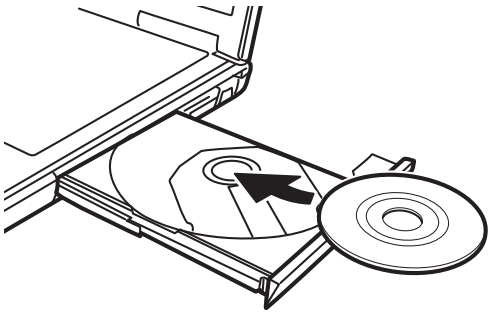

Insert the CD into your CD drive and follow the instructions on the screen.

Note: If the install screen does not launch automatically, open the folders on the CD and double-click the setup.exe file.

# Installing the Software

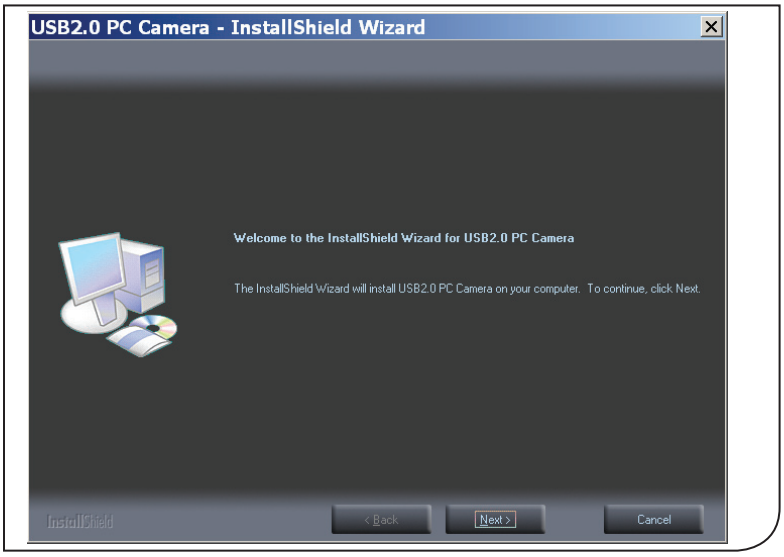
USB2.0 PC Camera - InstallShield Wizard
Welcome to the InstallShield Wizard for USB2.0 PC Camera
The InstallShield Wizard will install USB2.0 PC Camera on your computer. To continue, click Next.
InstallShield
< Back
Next >
Cancel

**1** The InstallShield® Wizard will guide you through the installation process. Click **Next** to continue.

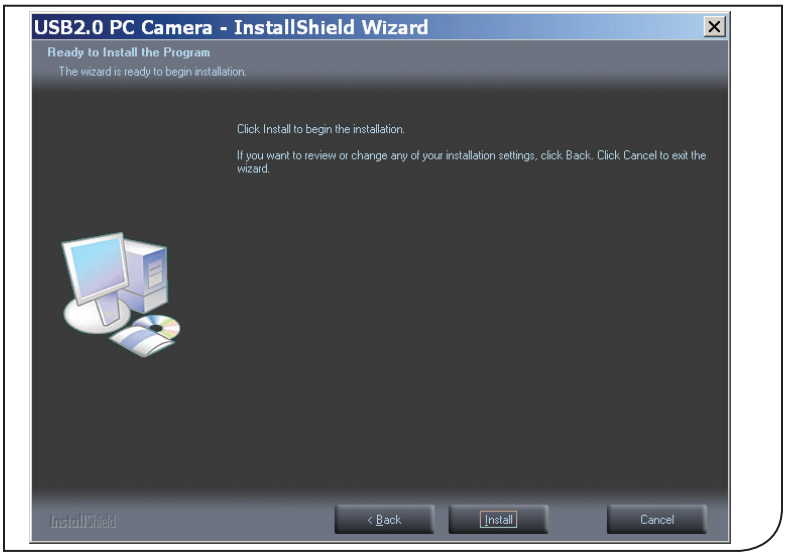
USB2.0 PC Camera - InstallShield Wizard
Ready to Install the Program
The wizard is ready to begin installation.
Click Install to begin the installation.
If you want to review or change any of your installation settings, click Back. Click Cancel to exit the wizard.
InstallShield
< Back
Install
Cancel

**2** To continue with the installation, click **Install**.

USB2.0 PC Camera - InstallShield Wizard
InstallShield Wizard Complete
The InstallShield Wizard has successfully installed USB2.0 PC Camera. Before you can use the program, you must restart your computer.
Yes, I want to restart my computer now.
No, I will restart my computer later.
Remove any disks from their drives, and then click Finish to complete setup.
InstallShield
< Back
Finish
Cancel

**3** To immediately begin using the software, you must restart your computer after the installation is complete. Select **Yes** or **No**.

# Capturing a Video

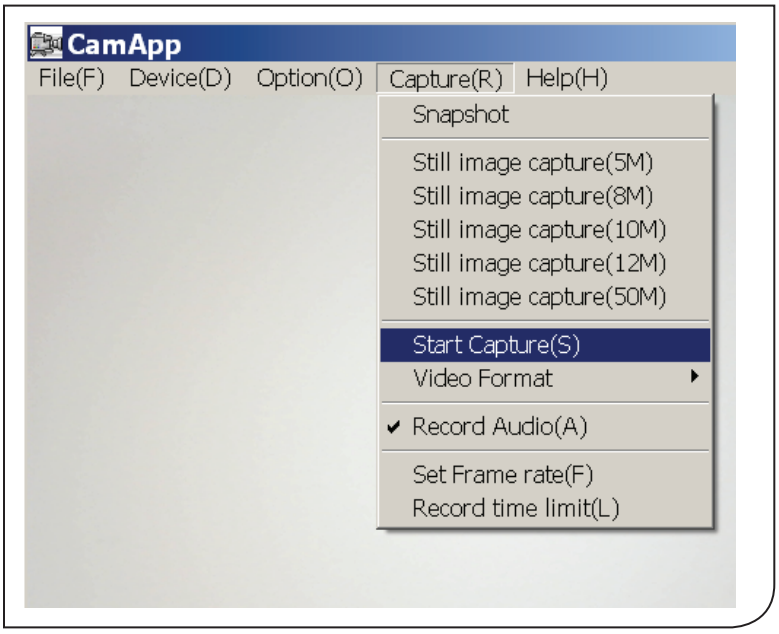


**1** Launch CamApp.

Click on **Capture (R)**, and then select Start **Capture (S)**.

Your video will immediately begin recording.

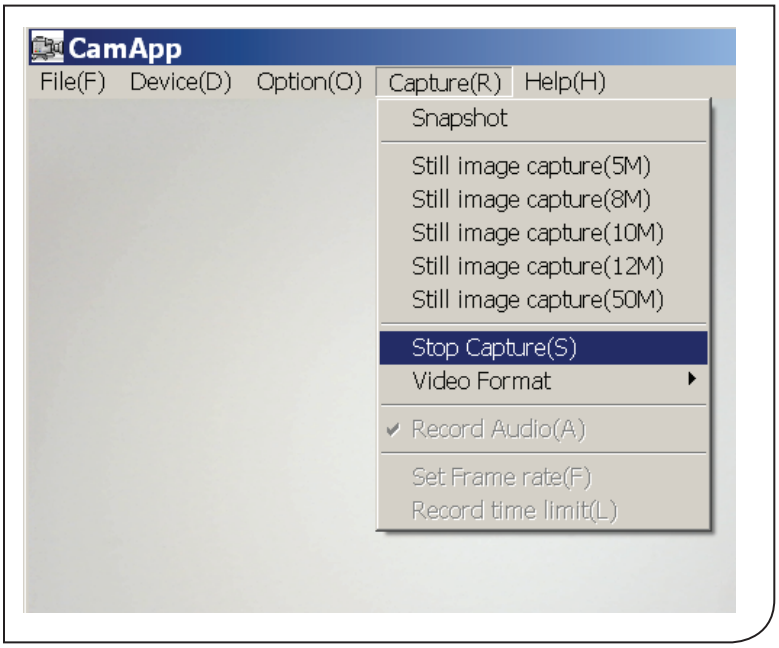


**2** When you are done capturing a video, click on **Capture (R)**, and then select **Stop Capture (S)**.

Your video will automatically be saved in the My Videos folder. To change the location where your videos will be saved, see page 6.

# Capturing a Photograph

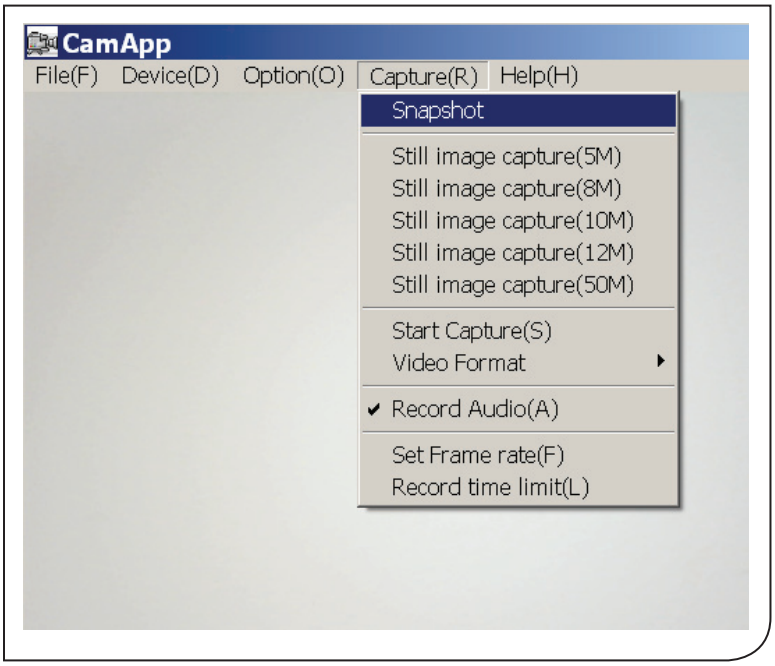


**1** Launch CamApp.

Click on **Capture (R)**. Choose a photo setting:

- Snapshot
- Still image capture (5M)
- Still image capture (8M)
- Still image capture (10M)
- Still image capture (12M)
- Still image capture (50M)

Note: Choosing a larger file size will increase the resolution and print quality in your photo.

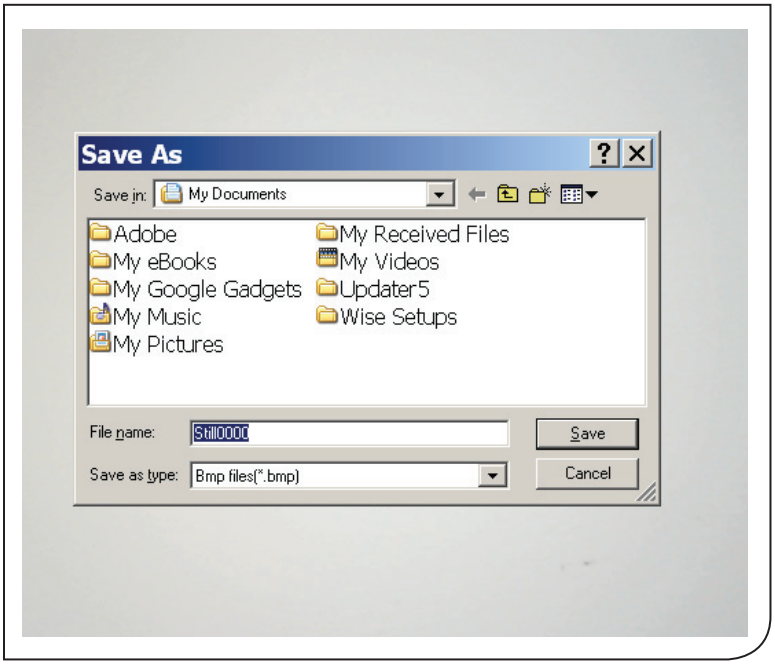


**2** After the image has been captured, the Save As box will appear. Navigate to your desired location and click **Save**.

# Setting Webcam Options

The software has many options available to personalize your settings.

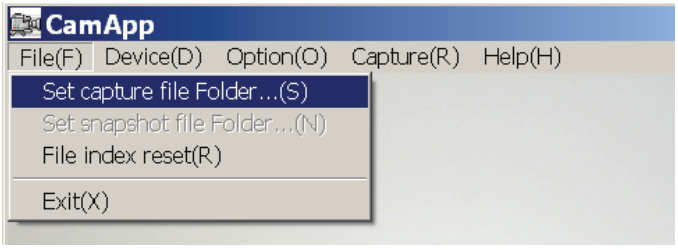


**1** To select a folder where your videos will be automatically saved, click on **File (F)** and then select Set capture file **Folder (S)**.

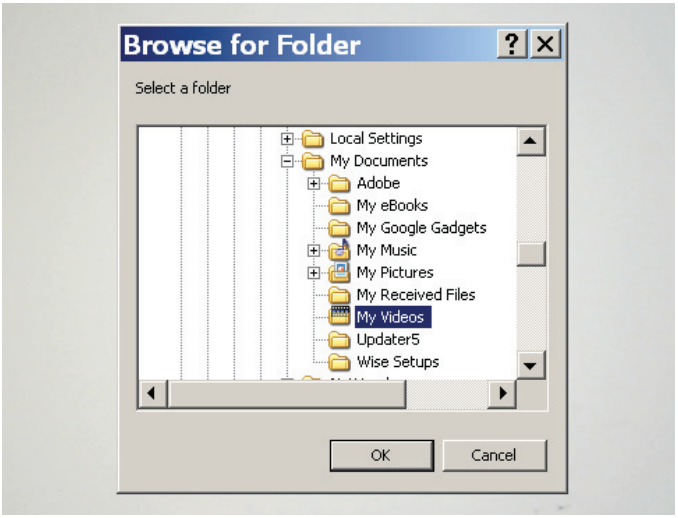


**2** Navigate to the desired folder and click **OK**. The default folder is My Videos.

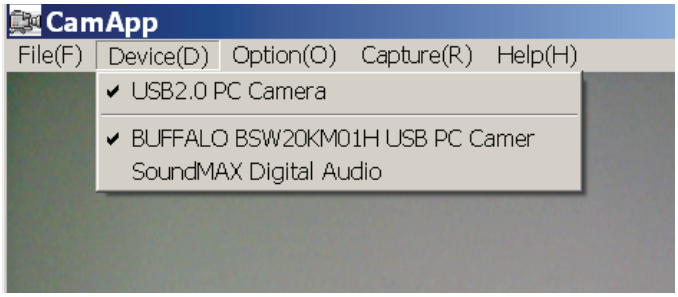


**3** The **Device (D)** menu allows you to switch between your currently installed video, photo, or audio capturing devices (if applicable).

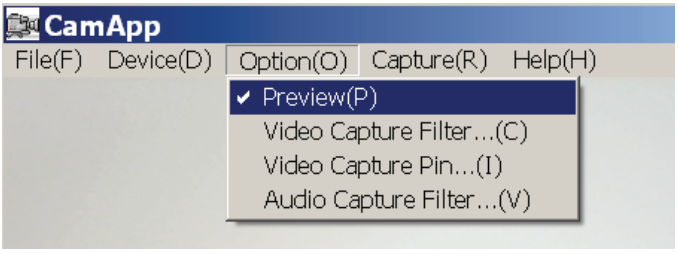


**4** The **Preview (P)** option allows you to view on your screen what the camera is currently seeing. It is selected as a default.

**5** The **Video Capture Filter...(C)** includes the following options:

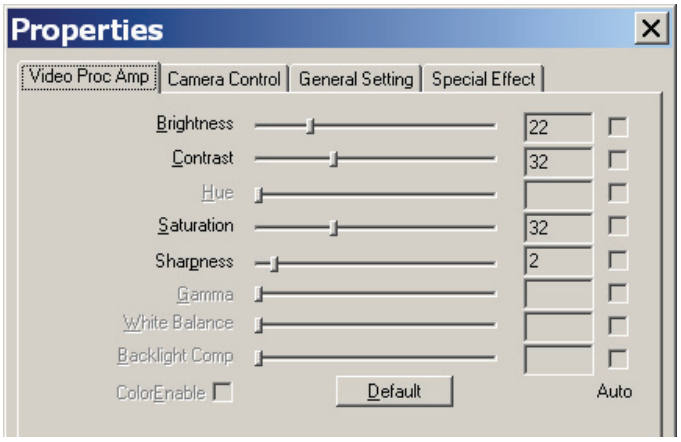


*Video Processing:*
Set Brightness, contrast,hue, etc. by sliding the bars or typing in a number. Some options may be automatically selected.

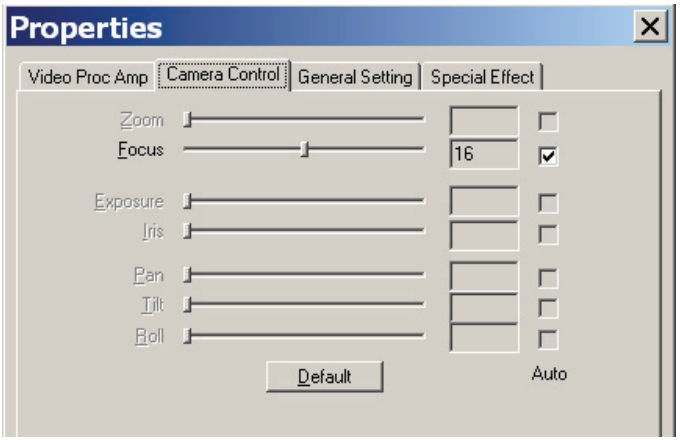


*Camera Control:*
Adjust zoom and focus using the sliding bar. Some options may not be available or may be automatically selected.

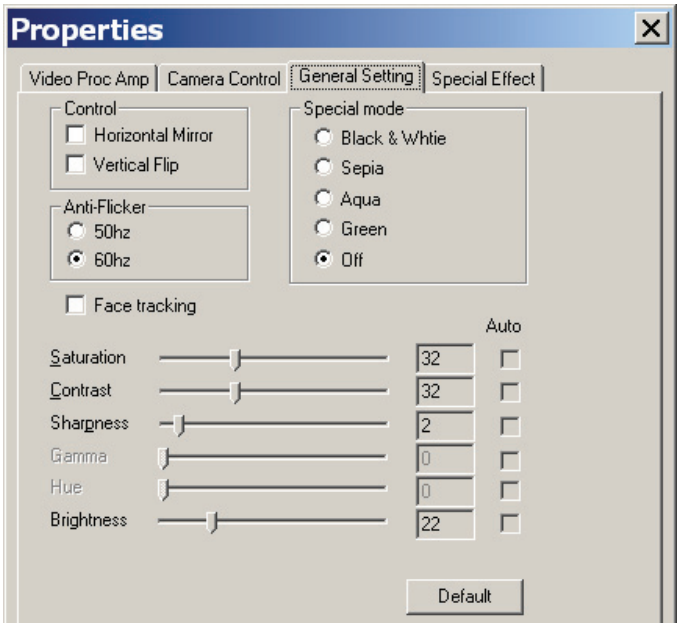


*General Settings:*
Set Face Tracking, Control, Anti-Flicker, Special Modes and color options.

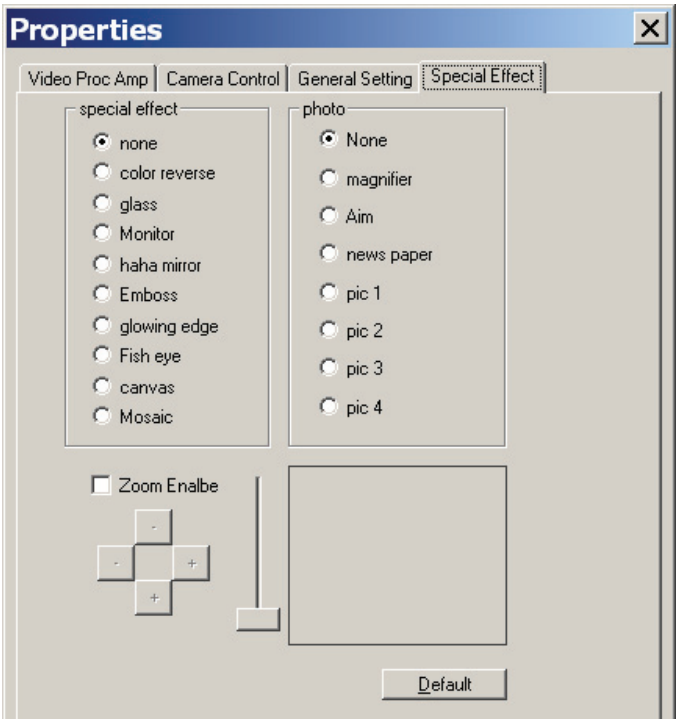


*Special Effect:*
Photo and video special effects are available.

# Setting Webcam Options

**6** The **Video Capture Pin...(I)** includes the following options:

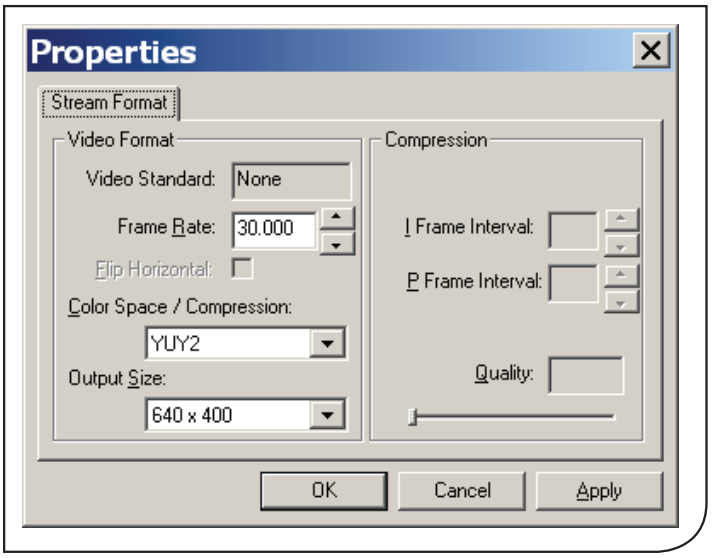


**7** The **Audio Capture Filter...(V)** includes the following options:

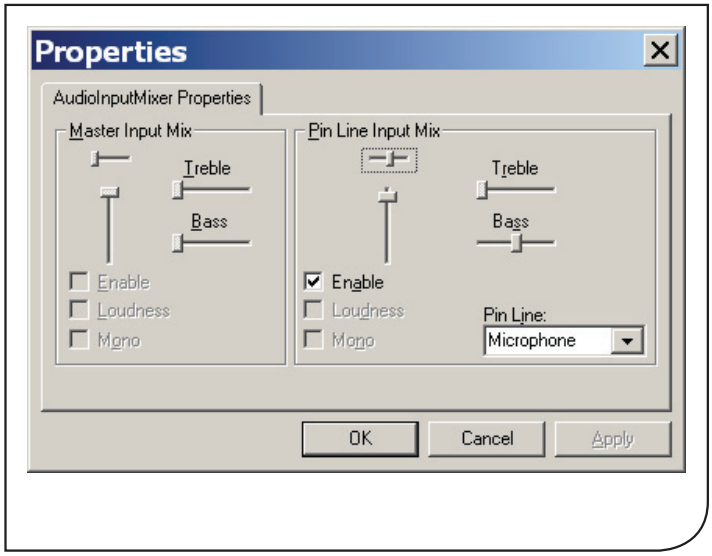


**8** In addition to capturing videos and picture, the **Capture (R)** menu has the following options:

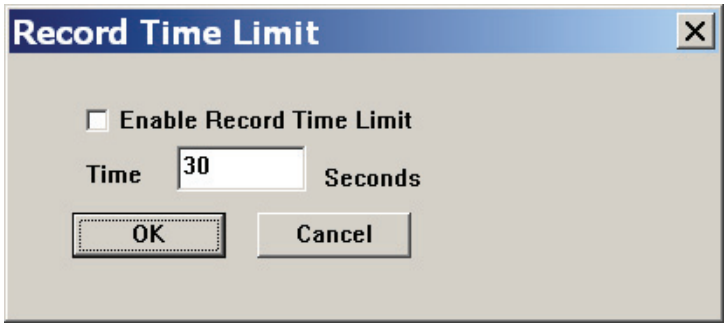


*Record Time Limit:*
Set a time limit for each video you wish to record.

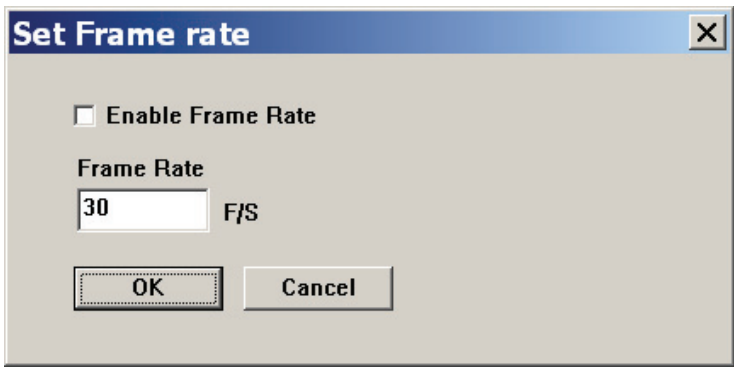


*Set Frame Rate:*
Set a number of frames per second you wish to record.

## Webcam Features

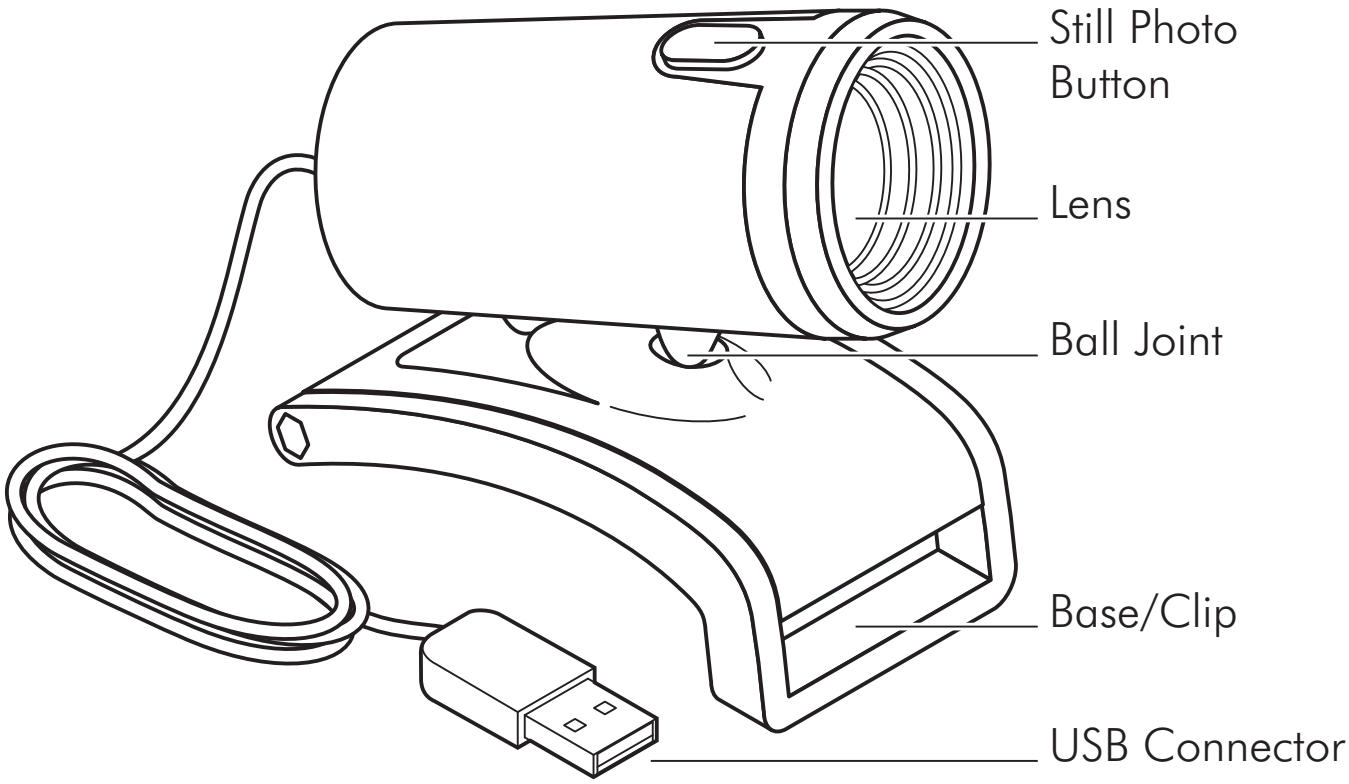


## Maintaining Your Webcam

Regular maintenance ensures a longer product life and minimizes the chance of causing damage to your webcam.

- Always disconnect the webcam before cleaning it.
- Clean the lens with a lint-free cloth.
- Do not try to repair any part of this product. For technical support please go to www.digitalinnovations.com then click on "Support".